

**MODEL 6115G-8
GPS SYNCHRONIZED
MINIATURE TIME CODE GENERATOR**

**Revised
October 10, 2007**

MODEL 6115G-8
GPS SYNCHRONIZED MINIATURE
TIME CODE GENERATOR
Table of Contents

<u>Paragraph</u>	<u>Description</u>	<u>Page</u>
1.0	GENERAL	1
2.0	CHARACTERISTICS.....	2
2.1	Time Code Synchronization.....	2
2.2	Time Offset.....	2
2.3	Dynamic Mode	2
2.4	Serial Data Output	2
3.0	MECHANICAL CONFIGURATION.....	8
4.0	CONTROLS, INDICATORS AND CONNECTORS	9
4.1	Power On/Off	9
4.2	Power	9
4.3	Lock	9
4.4	Power Input.....	9
4.5	GPS Antenna	9
4.6	IRIG B Output	9
4.7	RS-232	9
4.8	1PPS (Output).....	10
4.9	TRIG (Input).....	10
4.10	IRIG B Output Level	10
5.0	SPECIFICATIONS.....	11
5.1	Internal Frequency Stability	11
5.2	IRIG B Output	11
5.3	1PPS Output	11
5.4	Trigger Input.....	11
5.5	GPS Performance	11
5.6	GPS Antenna	11
5.7	Serial Interface.....	11
5.8	Temperature.....	11
5.9	Humidity	12
5.10	Package	12
5.11	Power Input.....	12

MODEL 6115G-8
GPS SYNCHRONIZED MINIATURE
TIME CODE GENERATOR
Table of Contents (continued)

6.0	SETUP VIA CONFIGURATION UTILITY.....	13
6.1	Open Port.....	13
6.2	Close Port	13
6.3	Read Status	13
6.4	Set Time Offset.....	13
6.5	Set Dynamic Mode.....	13
6.6	Time/Location	14
6.7	Event Control.....	14
6.7.1	Trigger Polarity.....	14
6.7.2	Event Enabling	14
6.7.3	Auto Send	14
6.7.4	Query	14

<u>Figure</u>	<u>Description</u>	<u>Page</u>
1	Model 6115G-8 Front/Back/Top Panel.....	8
2	Model 6115G-8 Configuration Utility.....	15

<u>Table</u>	<u>Description</u>	<u>Page</u>
1	Dynamic Mode Definitions.....	3
2	6115G-8 Serial Control Commands	4
3	6115G-8 Serial Data Output Formats.....	5

**Model 6115G-8
GPS SYNCHRONIZED
MINIATURE TIME CODE GENERATOR**

1.0 GENERAL

The Model 6115G-8 GPS Synchronized Miniature Time Code Generator provides an IRIG B time code output derived from GPS. The time code output is synchronized with UTC time unless a time offset has been programmed. A twelve channel GPS receiver automatically acquires all in-view satellites upon power up and locks an internal IRIG B time code generator to the GPS time reference. If the GPS lock is lost the 6115G-8 will automatically switch to an internal clock and continue generating the output IRIG B signal. No discernible change in the IRIG B output will occur due to this transition. Major features include:

- 1. Twelve Channel GPS Receiver.*
- 2. IRIG B time code generator.*
- 3. Battery backed up internal clock, maintains time during power loss.*
- 4. UTC time mark output.*
- 5. RS-232C serial port.*
- 6. Outputs Time and Latitude & Longitude via serial port.*
- 7. Time offset input via serial port.*
- 8. Event trigger input.*
- 9. Non-Volatile Memory.*
- 10. Includes active GPS antenna.*
- 11. User Selectable Dynamic Mode*

The 6115G-8 is housed in an aluminum enclosure, 7.5 inches long (including mounting flanges), 4.25 inches wide and 1.45 inches high. It is powered by 9 to 36 Volts DC.

2.0 CHARACTERISTICS

2.1 TIME CODE SYNCHRONIZATION

The 6115G-8 internal IRIG B clock is automatically synchronized to GPS generated UTC time mark upon receipt of a valid number of GPS satellite signals. If the unit loses the GPS lock after initial synchronization, it will continue to operate on the internal clock which continues to generate the serial IRIG B signal output. No discernible change in the IRIG B output will occur when the GPS signal lock is lost after synchronization. The lock status is shown on a front panel LED.

2.2 TIME OFFSET

The 6115G-8 features a programmable time offset to convert the time from the GPS receiver from UTC time to local time. The time offset is entered via the RS-232 port. NOTE: The internal IRIG clock will not respond to the programmed time offset unless the 6115G-8 is locked to GPS. If the 6115G-8 time offset is programmed while the unit is not locked to GPS, it will respond the next time GPS lock is acquired. After the initial GPS lock, following entry of the offset value, the corrected offset time will remain even if lock is lost. Once entered, the data will be stored in non-volatile memory until overwritten. The time offset command format is shown in Table 2.

2.3 DYNAMIC MODE

The 6115G-8 has a programmable Dynamic Mode feature which may be set by the operator. A list of the mode descriptions is shown in Table 1 (page 3). The mode value is entered via the RS-232 port. Once entered the value is stored in non-volatile memory.

2.4 SERIAL DATA I/O

The 6115G-8 has an asynchronous RS-232C port, which provides a means of configuring the unit, as well as reading the time, event, and location information. The output messages for time/location and events are individually controlled. The Time/Location message may be set to OFF or AUTO. When set to AUTO messages are sent at one second intervals.

2.3 SERIAL DATA I/O (continued)

The Event message may also be turned off, or may be set to respond only to a Query or set to send automatically until the event buffer is empty. Note that if both the Event and Time/Location messages are set to AUTO, there may be an additional worse case Time/Location message latency of up to 8.33ms depending upon the event status. The command set is shown in Table 2 (page 4). The output data formats are shown in Table 3 (page 5).

Table 1
Dynamic Mode Descriptions

0	=	Fixed base station, maximum time and frequency accuracy.
1	=	Stationary, but unknown position.
2	=	Man pack / Walking
3	=	Automotive / Land Vehicle
4	=	Marine
5	=	Airborne, Low dynamics (<1g)
6	=	Airborne, Medium dynamics (<2g)
7	=	Airborne, High dynamics (<4g)
8	=	Airborne, Very High dynamics (<8g)
9	=	Drone, Missile dynamics (<16g)

Table 2
6115G-8 SERIAL CONTROL COMMANDS

<u>Command</u>	<u>Description</u>
<i>Ex</i>	Event Polarity, where: E = ASCII character <i>x</i> = 0 Low going edge <i>x</i> = 1 High going edge
<i>Qx</i>	Event Control, where: Q = ASCII character <i>x</i> = 0 Disable events; clear pending events. <i>x</i> = 1 Enable queuing of events; do nothing until Query or Auto. <i>x</i> = 2 Enable queuing of events and Auto send event message as soon as data is available. <i>x</i> = 3 Enable queuing of events and respond immediately with Event Message. If no data is queued message will indicate empty status. (See Table 3)
<i>Tx</i>	Time/Location output control, where: T = ASCII character <i>x</i> = 0 Time/Location “send” OFF <i>x</i> = 1 Time/Location “send” ON, send at one second intervals.
<i>snn</i>	Time Zone offset, where: <i>s</i> = sign of + or – <i>nn</i> = hours of 00 to 12
<i>S</i>	Status Request, where: S = ASCII Character
<i>Dx</i>	Dynamic Mode Set/Query, where: D = ASCII Character <i>x</i> = 0 to 9 (Set Mode) ? = Query mode

Table 3
6115G-8 SERIAL DATA OUTPUT FORMAT

Time/Location Message

The Time/Location message is formatted as a 35 byte serial ASCII message that includes UTC time, and Latitude & Longitude. In the absence of GPS lock the serial data will continue with the time derived from the internal clock. The latitude and longitude, however, will be forced to zeros and the signs will be forced to positive. The message format is:

Tdddhhmmss,Sddmm.fff,Sdddmm.fff <CR><LF> where:

T = ASCII character "T" which indicates start of message and designates the time at which the previous time message is valid. If all latencies are considered, the receipt of this character can be used to define the time to within approximately 0.55 milliseconds with a serial data rate of 19.2K baud. An additional latency of up to 8.33ms may occur if an event message is currently being output. If greater accuracy is desired RTS may be monitored. This signal drops (high to low) at the precise time of the UTC time mark produced by the GPS receiver.

ddd = Days
hh = Hours
mm = Minutes
ss = Seconds
 , = delimiter
S = Sign +/- (N/S)
dd = degrees of latitude
mm = minutes of latitude
.fff = fractional minutes of latitude
 , = delimiter
S = sign +/- (E/W)
ddd = degrees of longitude
mm = minutes of longitude
.fff = fractional minutes of longitude
 <CR> <LF>= Carriage return/Line feed

Table 3
6115G-8 SERIAL DATA OUTPUT FORMAT
(continued)

Event Message

The Event message is formatted as a 16 byte serial ASCII message that includes the event time to a 0.1ms resolution. When the message is set to “Auto Send Events”, it will be sent whenever data is available. When set to “Query Events” the message will be sent immediately upon receipt of the query. (See Table 2) The message format is:

Qdddhhmmsffff<CR><LF> where:

Q = ASCII character
ddd = Event Days
hh = Event Hours
mm = Event Minutes
ss = Event Seconds
ffff = Event Milliseconds (0.1 msec resolution)
<CR><LF> = Carriage return/Line feed

Note that if there is no data available and a Query is sent, the unit will respond with:

Q<CR><LF> This message indicates that the event buffer is empty.

Status Request Message

When a Status Request is sent to the 6115G-8 (See Table 2), the unit will respond with the following message:

*S±ztp*e<CR><LF> where:

S = ASCII Character
±z = Time Zone Offset
t = 0 Time/Location “send” set to OFF
t = 1 Time/Location “send” set to ON
p = 0 Trigger polarity set to low going edge
p = 1 Trigger polarity set to high going edge
e = 0 Event queuing set to “Disabled”
e = 1 Event queuing set to “Enabled”.
e = 2 Event queuing set to “Enabled” and Auto Send set to “Enabled”
<CR><LF> = Carriage return/Line feed

Table 3
6115G-8 SERIAL DATA OUTPUT FORMAT
(continued)

Dynamic Mode Query Message


When a Dynamic Mode Query is sent to the 6115G-8 (See Table 2), the unit will respond with the following message:

Dn<CR><LF> where:
n = Dynamic Mode setting

3.0 MECHANICAL CONFIGURATION

The 6115G-8 is housed in an aluminum enclosure, 7.5 inches long (including mounting flanges), 4.25 inches wide and 1.45 inches high. All controls, connectors and indicators are on the front panel. (See figure 1)

Figure 1
6115G-8 enclosure

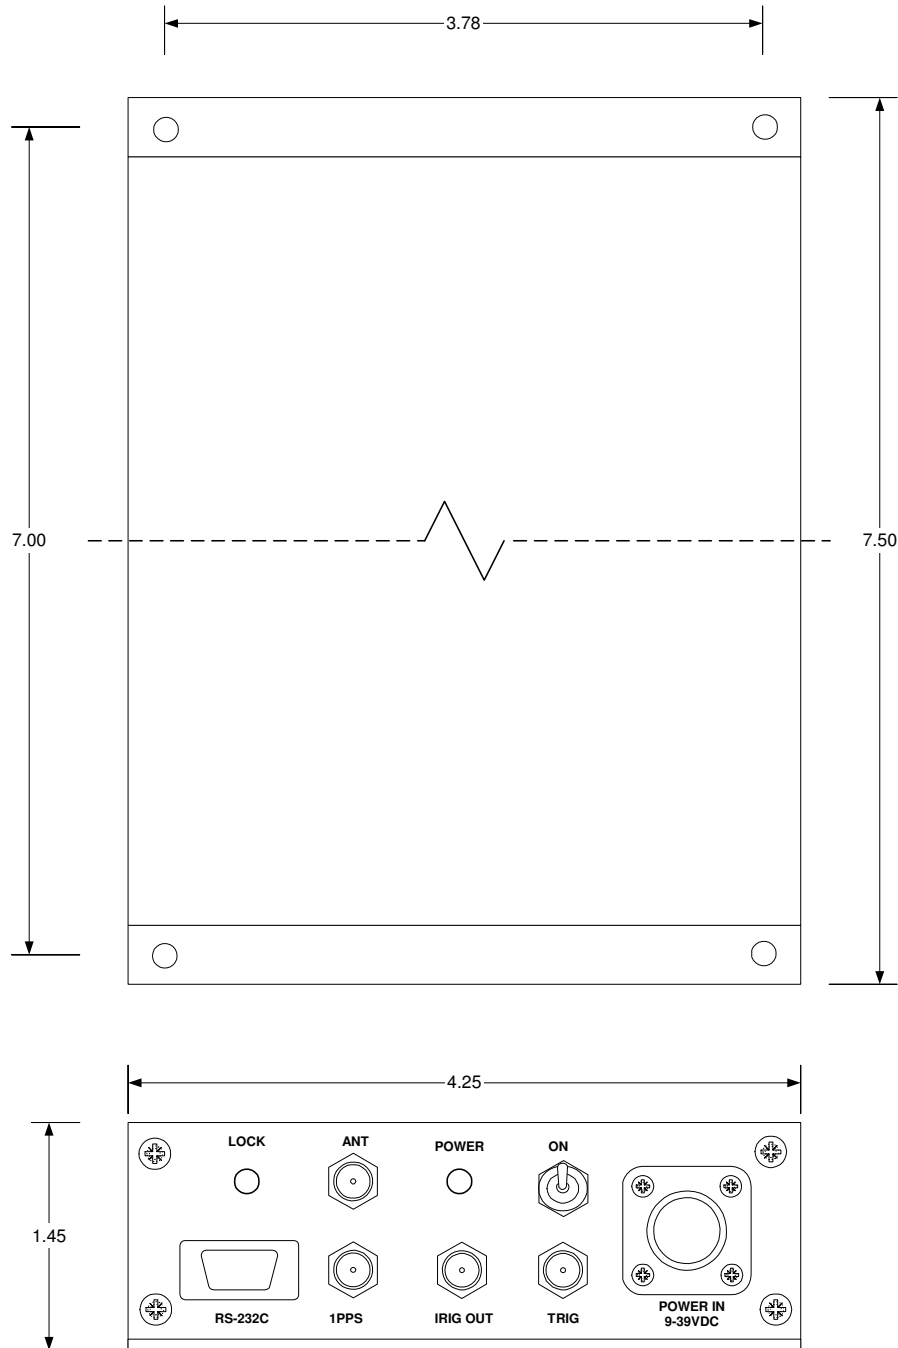

4.0 CONTROLS, INDICATORS AND CONNECTORS

- 4.1 Power On/Off Toggle Switch - Turns power on and off.
- 4.2 Power Green LED Indicator – Illuminated when power is on.
- 4.3 Lock Yellow LED Indicator – Illuminates when GPS lock is acquired and Time Code generator is synchronized to GPS.
- 4.4 Power Input KPT02A8-3P Connector - 28VDC external power. Pinout is as follows:
A - 28VDC
B - 28VDC return
C - Chassis ground
- 4.5 GPS Antenna SMA connector - Connects to external active antenna. Do not attach a passive antenna to this connector unless it includes a DC block. The unit is set to interface with active antennas utilizing 5 volt power.
- 4.6 IRIG B Output SMA Connector - Outputs serial IRIG B signal. 3:1 modulation ratio. Factory set to 3V peak to peak.
- 4.7 RS-232 DE-9S connector - Outputs time, latitude, longitude and event time. Receives configuration and control commands. Also outputs UTC time mark on the RTS output.
- | <u>Pin</u> | <u>Mnemonic</u> | <u>Function</u> |
|------------|-----------------|---|
| 2 | RxD | Receive data input |
| 3 | TxD | Transmit data output |
| 5 | Gnd | Signal ground |
| 7 | RTS | Request-to-send output (1pps time mark) |
| 8 | CTS | Clear-to-send input (n/u) |

4.0 CONTROLS, INDICATORS AND CONNECTORS (continued)

- | | | |
|------|---------------------|--|
| 4.8 | 1PPS | SMA Connector -
Outputs UTC Time Mark, TTL |
| 4.9 | TRIG | SMA Connector -
Receives TTL Event Trigger. |
| 4.10 | IRIG B Output Level | Internal Potentiometer -
Sets the level of IRIG B output. Range is 0 to 5V
peak to peak unloaded. Factory set to 3V peak to
peak. |

5.0 SPECIFICATIONS

5.1	Internal Frequency Stability	2.5 parts in 10^6 when not locked.
5.2	IRIG B Output	Standard IRIG B serial time code IAW IRIG Standard 200-98 (synchronized with time code generator).
5.3	1PPS Output	Low true TTL signal, negative going edge corresponds to UTC time mark.
5.4	Trigger Input	TTL signal, captures event on rising or falling edge, as selected. Maximum burst event input rate = 100KHz. Max stored events = 127. Note: When "Auto Send Events" is enabled, the sustained event trigger rate is limited to an average of 120 Hz to avoid buffer overflow. This rate assumes that the Auto Send of the Time/Location message is OFF.
5.5	GPS Performance	
	Channels:	12 Parallel channels, tracks all satellites in view.
	Time-to-first-fix:	<24 seconds typical (warm start), <150 seconds typical (cold start).
	UTC Time Mark:	Synchronized with Global Reference Standard ± 100 ns.
	Reacquisition:	2 seconds typical.
	Datum:	WGS 84
5.6	GPS Antenna	Active Magnetic Mount Patch Antenna, 5 VDC power provided via antenna cable. Gain: 26 db \pm 2 db. Noise figure: 1.5 db Max.
5.7	Serial Interface	EIA RS-232C, Asynchronous, 19200 baud, 8 data bits, 1 start bit, 1 stop bit, no parity, no flow control. Note that the RTS output pin is not used for handshake but instead outputs the 1Hz UTC Time mark.
5.8	Temperature	
	Operating:	0°C to +60°C
	Non-operating:	-20 to +70

5.0 SPECIFICATIONS (continued)

5.9	Humidity	95% non-condensing
5.10	Package	Aluminum enclosure, 7.5 inches long (including mounting flanges), 4.25 inches wide and 1.45 inches high.
	Weight:	1.5 lbs.
5.11	Power	9 to 36 Volts DC, 2.7 Watts

6.0 SETUP VIA CONFIGURATION UTILITY

Included with the 6115G-8 is a CDROM containing a self-installing utility program for setting up the unit via a Graphical User Interface (GUI) from a Windows™ computer. The program will run under Windows 9x, 2000, NT, ME and XP operating systems. The user must connect the 6115G-8 to one of the computer's COM ports. All setup data is saved in non-volatile RAM. (see figure 2).

6.1 OPEN PORT

This button, when active, allows the user to open the respective COM port on which the 6115G-8 is connected. This button will be grayed out when it has been pressed, and the **Close Port** button will be active. The port must be opened before commands to the board are accepted. The user should avoid selecting an incorrect COM port as that port may be in use for some other purpose (e.g. the mouse is usually on COM 1 unless a PS/2 mouse is used).

6.2 CLOSE PORT

This button, when active, deactivates the COM port preventing further communication with the 6115G-8. The port is automatically closed when you exit the program.

6.3 READ STATUS

Clicking the READ STATUS button will return the status of the current configuration of the unit including: time offset, dynamic mode, event control status, event trigger polarity and time/location "auto send" status

6.4 SET TIME OFFSET

To change the time to local time, click the drop down list on the Time Offset box and select the desired offset value. Press the **Enter Value** button to accept the value.

6.5 SET DYNAMIC MODE

To change dynamic mode, click the drop down list on the Dynamic Mode box and select the desired mode value. (see Table 1) Press the **Enter Value** button to accept the value.

6.6 TIME/LOCATION

When the 6115G-8 is locked to GPS, the Time, Latitude & Longitude may be displayed in the respective boxes by clicking the “Auto Send ON” button. The display will continue to update at a one second interval until the “Auto Send OFF” button is selected. The default selection is “Auto Send OFF”

6.7 EVENT CONTROL

6.7.1 Trigger Polarity

When “Trigger on Positive” is selected the event time will be captured on the positive going edge of the event trigger. Conversely, when “Trigger on Negative” is selected the capture occurs on the negative going edge. The default selection is “Trigger on Positive”

6.7.2 Event Enabling

When “Events Enabled” is selected the trigger is active however no data output will occur unless “Auto Send“ or “Query” is activated. When “Events Disabled” is selected, the event trigger is disabled and all events are cleared from the buffer. The default selection is “Events Disabled”

6.7.3 Auto Send

When the “Auto Send” button is clicked the event trigger is automatically enabled and event time data is received and displayed in the “EVENTS” window. The unit will continue to send event information as long as there is data available.

6.7.4 Query

When the “Query” button is clicked the event trigger is automatically enabled and a single event message is received. If there is no event data in the buffer there will be no action.

FIGURE 2

Model 6115G-8 Configuration Utility

